



This information is useless. Builder needs to reference these heights relative to a 0'-0" starting point at the Second Floor Plan level.

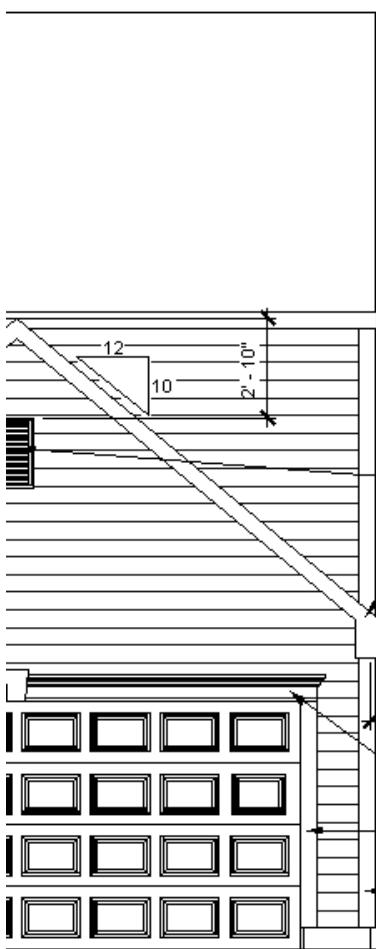

Building from the ground up, once the 2nd floor has been constructed 2nd floor window and plate heights are dimensioned from a 0'-0" 2nd floor reference. This is how I need the 2nd floor level heads to display in elevation views.

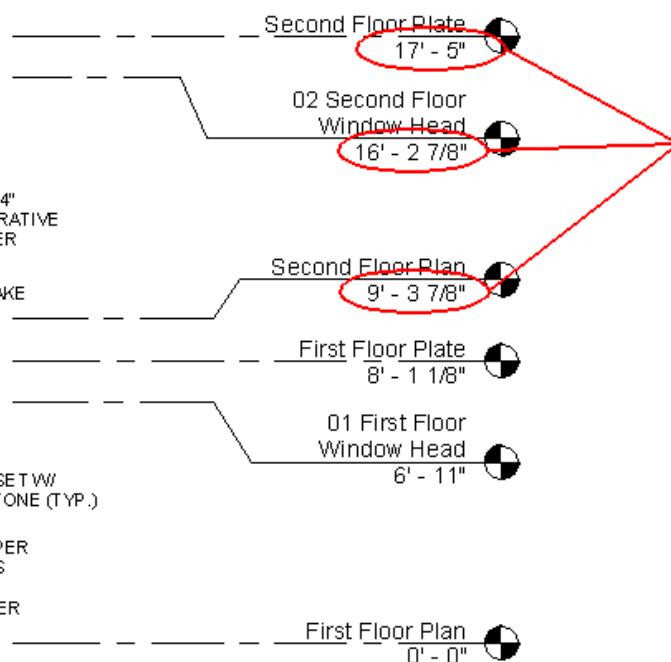