


- Select the panel (unpin if defined by the CW type)
- Click Edit in Place

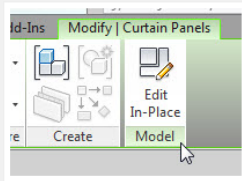

- You'll find you are in Sketch Mode
- Select and edit the solid form for glass/solid or
- Create another form/void to design the custom panel
- Assign Sub-category(ies)
- Assign Material(s)
- Finish the modelling
- Finish the in-place editing

et Voila!

